



# Nikon Coolpix L330 Back Housing Replacement

Use this guide to replace a scratched or damaged back housing.

Written By: Taibah



## INTRODUCTION

Use this guide to replace a scratched or damaged back plate.

This guide requires removing the back housing of the camera. When replacing the housing, use a PH000 screwdriver. The cover is well secured, so some force may be needed to remove the screws as well as the cover.



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Housing




- There are six screws attaching the back housing to the camera. Remove the screws from the body with a PH000 screw head.
  - Two 1.5x2.5mm screws on the right side.
  - Two 1.5x2.5mm screws on the underside.
  - Two 1.5x2.5mm screw on the left side.

## Step 2



- After removing the screws, use a metal spudger or plastic opening tool to push the back cover out.

 The metal spudger can damage the plastic housing, so use caution when applying any pressure to it. Use a plastic opening tool to reduce the risk of damage to the housing.

- Remove the back housing of the camera by lifting it directly up.

 The back cover may be slightly tight, therefore more force may be needed to lift it up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 06:30:40 PM.